

 
LIVART

Living Good Living Art

Multi Cooker

USER'S MANUAL

LV-301

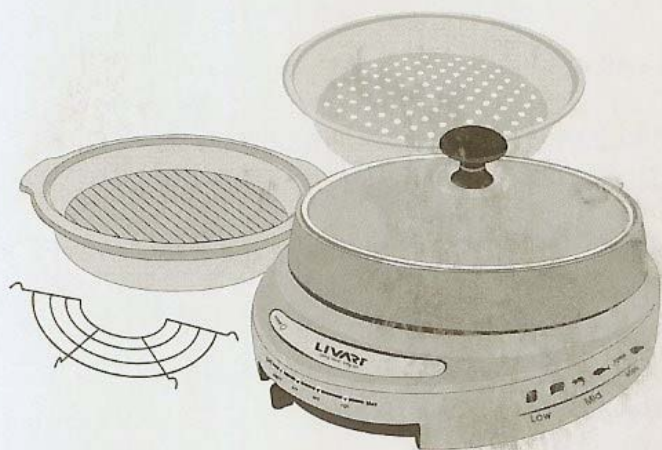

※ Read this User's manual carefully before using and save it for future reference.

IMPORTANT SAFETY INSTRUCTIONS


-Read all instructions before using this appliance-

- Check that the appliance and all attachments have not been damaged in transit before first-time use.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- To disconnect, turn control lever 'OFF', then remove the plug from wall outlet.
Unplug from outlet when not in use
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not immerse power cord, plug and main body in water or other liquid to protect against electric shock.
- Do not attempt to disassemble the main body yourself.
- If the control panel has been exposed to water or rain, contact the nearest authorized service facility. And qualified service personnel must do the repair.
- This appliance should be operated from the type of power indicated on the rating label (attached on the bottom of this appliance). To prevent an electrical overload condition, remove all other plugs from the outlet.


- Do not operate the appliance in the presence of explosive or flammable fumes, near clothing, curtains and other flammable materials.
- Do not touch hot surface. And wait enough to let the grill cool before cleaning.
- Do not use this appliance on an unstable table, any slippery place, and on a tablecloth unprotected against heat.
- Close supervision is necessary when the appliance is used near children.
When operating or storing the appliance, keep it out of reach of children.
- Do not let the cord hang over edge of table or counter, or touch hot surface.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use this appliance for other than intended use.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- **WARNING:** Charcoal or similar combustible fuels must not be used with this appliance.
- **Save this instruction book for future reference.**

– HOUSEHOLD USE ONLY –


DESCRIPTION

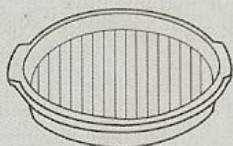


ROAST PAN

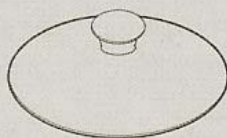

GLASS LID

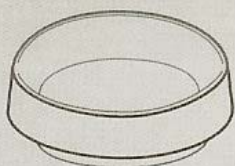 


COOKER POT

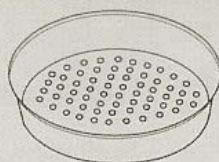

STEAMER



DEEP FRY RACK

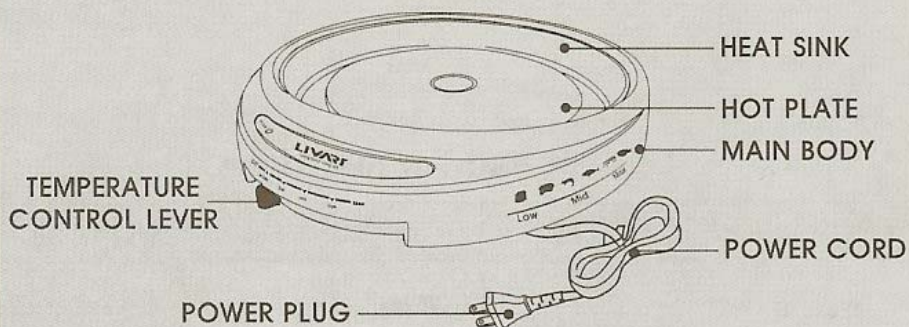

GRILLING INSTRUCTIONS

1. Install the appliance on a stable place.
2. Put the roast pan (or cooker) on the main body according to your cooking choice.
3. Plug into standard electrical outlet.

***Caution**

Before inserting the plug into the power socket, check that:

- the voltage shown on the plate (located on the bottom of the appliance) corresponds to the main voltage at the power socket
 - the plug fits the power socket (if not, contact us for more information)
4. Turn temperature control lever to LOW, MIDDLE or HIGH position to start cooking. And you can see that the lamp is on.
 5. You need pre-heating for several minutes. And during cooking, the lamp is automatically turning on and off to maintain proper temperature and to prevent overheating.
 6. When finished cooking, turn temperature control lever to OFF and then unpug.
 7. Wait at least 20 minutes for cooling. Keep your appliance clean for long-life use.

MAINTENANCE • FAQ

1. Clean the unit after each use and do not immerse the main body or the power cord in water.
2. To prevent any damage to the non-stick coating on the grill plate, do not use metallic utensils.
3. Before storing the appliance, dry each unit thoroughly.
4. Keep unit out of reach of children.

FAQ

Condition	Check points
The appliance generates smoke and odor when I use it for the first time	This is normal condition when you use for the first time. Heat the appliance about ten minutes and smoke and odor will be disappeared.
The plate cannot be heated after plugged	Please check that you are using a suitable voltage. Please check that the temperature lever is still on the 'OFF' location
Foods are stuck to the plate and burnt	You may set the temperature lever on high position all the time, please move the lever to the lower temperature position.

COOKING SELECTION

Roast pan

- Beef, Steak, fish, Pork, Every kind of roast, grilling
- Place the roast pan on the body with the side handle set a right angle with temperature control lever.

Cooker pot

 
 
 
- Soup, Pizza, Stew, Toast, Pop-com, Ham
- Place the cooker on the body with lid closed.

Steamer + Cooker pot

- Potato, Fish, Chestnut etc.
 - Place the cooker on the main body. Pour water up to 2cm from the bottom.
- Set the steamer basket on the cooker with lid closed.

Deep fry rack + Cooker pot

- Shrimp, Squid, French fry etc.
- Place the cooker equipped with fry rack on the main body

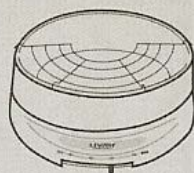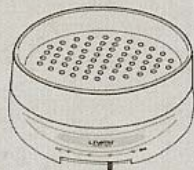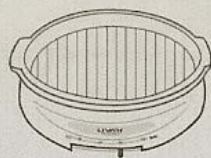

Dishes and Temperature

Temperature	Low (248°F)	Mid (356°F)	High (446°F)
Dishes	Ham, Omelette Toast, Mushroom	Pizza, Hamburger, Hot cake, Soup, Stew	Steak, Steam Fish, Popcorn

WARRANTY

We manufactured this appliance with all our heart and warrant each of our product will be free from defects in material and workmanship for a period of one year from the date of purchase, if the appliance is properly used and installed.

Extent of limited warranty

-We are not responsible for

- 1) damage due to accident, misuse, neglect, lack of reasonable care or usage not in accordance with instruction manual.
- 2) damage from unauthorized service of any type.

WARRANTY

• MODEL : LV-301

Warranty service

-To obtain warranty service, you may contact the retail location where it was purchased.



LG-LIVART, INC.
2110S, Tubeway Ave, Commerce, CA 90040
Tel: 877-260-4949, Fax: 323-887-7759
www.lglivart.com